



i-com Registration authenticate (in case of first install for i-com)

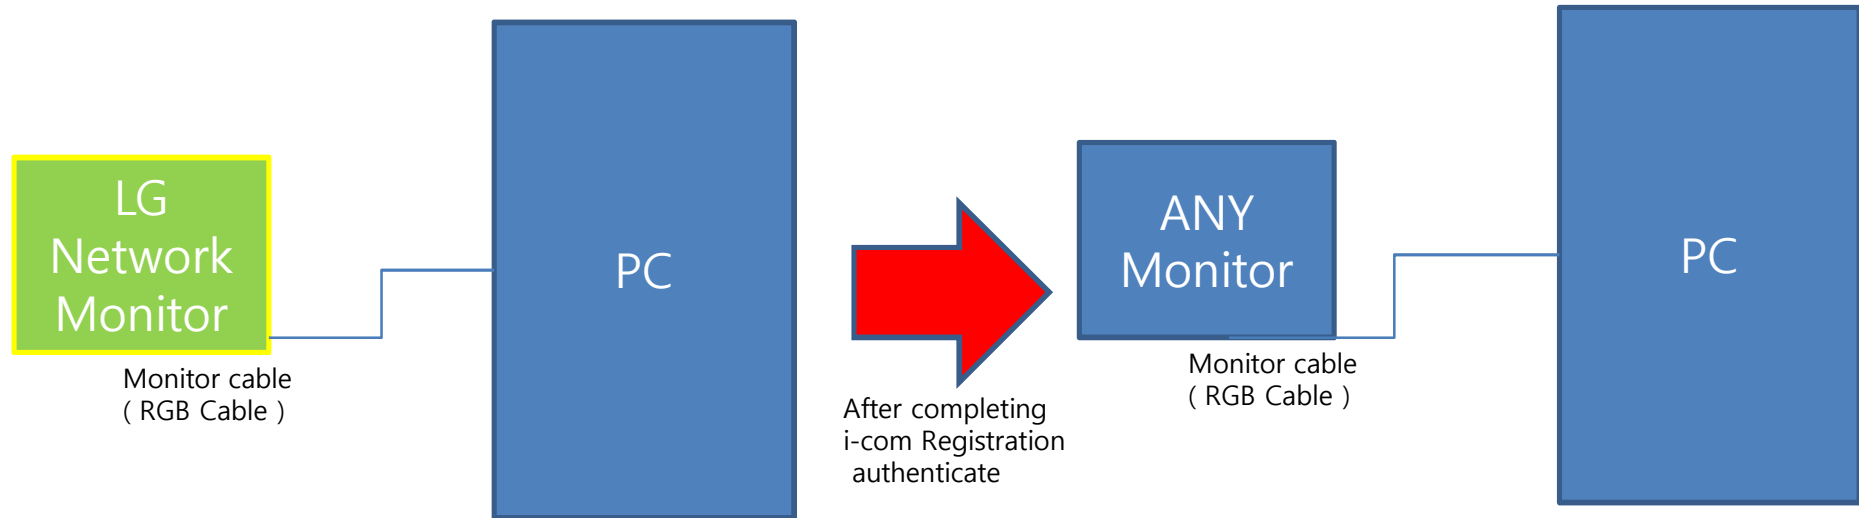

1. In order to use the official version of i-com though User Tool license authentication, LG network monitor must be connected to the main monitor of the PC
2. Please check Graphic Card Driver at Desktop PC
(if it is not perfectly installed at Desktop PC, you can't Registration regarding i-com)
3. Install i-com
4. If i-com Registration authenticate is complete, then you can change the PC Monitor because i-com s/w does not check

i-com Registration authenticate (in case of already installed i-com)

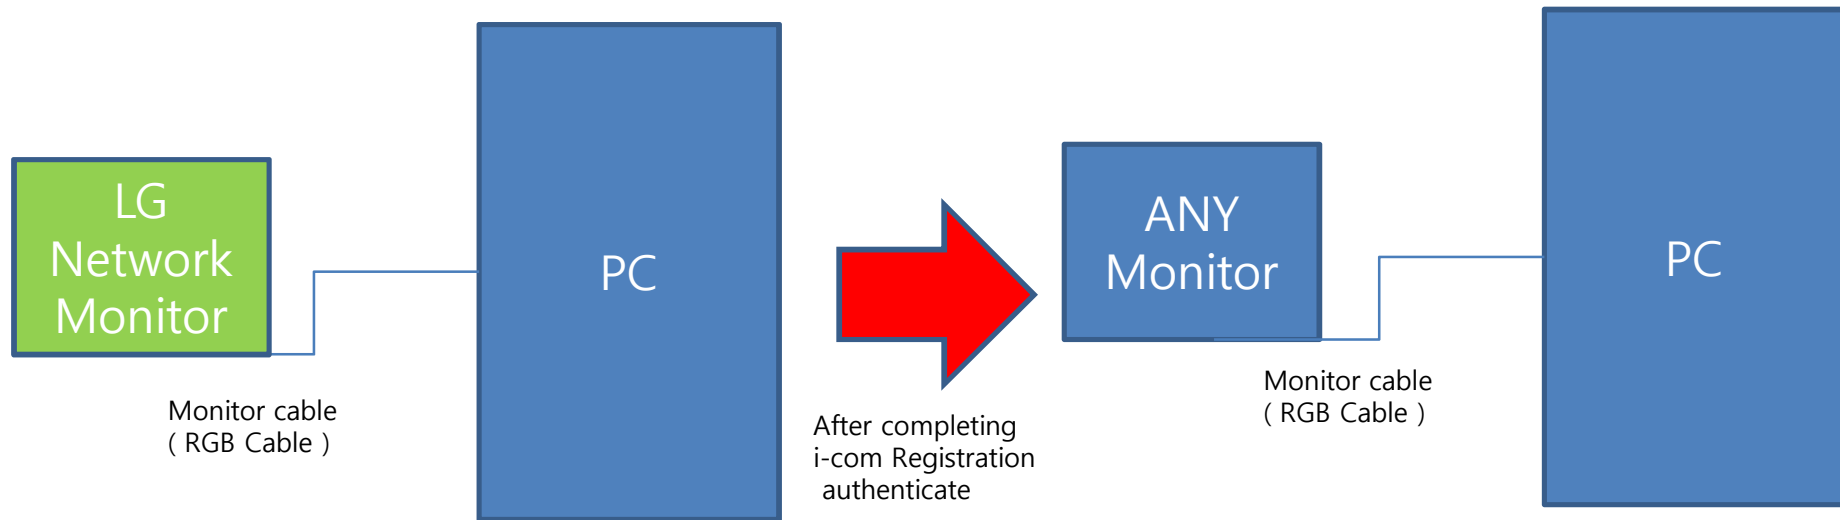

1. In order to use the official version of i-com though User Tool license authentication, LG network monitor must be connected to the main monitor of the PC
2. Please check Graphic Card Driver at Desktop PC
(if it is not perfectly installed at Desktop PC, you can't Registration regarding i-com)
3. Reboot the Host PC
4. Select the i-com menu
(Click on "Start → Programs → "User registration" of i-com)
5. If i-com Registration authenticate is complete, then you can change the PC Monitor because i-com s/w does not check